



**SOUTHERN ENTERPRISES INC.**


**STYLE NO:**  
VM538300TX "NATURAL MAPLE"  
VM538400TX "BLACK"  
**Oval Wall-Mount Jewelry Armoire**

RELAX!..If you can follow a few easy, step-by-step directions in order .YOU CAN ASSEMBLE THIS ITEM.

**PLEASE FIND HARDWARE IN RED POLYBAG BEFORE DISCARDING THE PACKING MATERIALS.**

**HARDWARE LIST**

(1) WOOD SCREWS	3PCS
(2) WALL FILLS	3PCS
(A) ARMOIRE	1PC

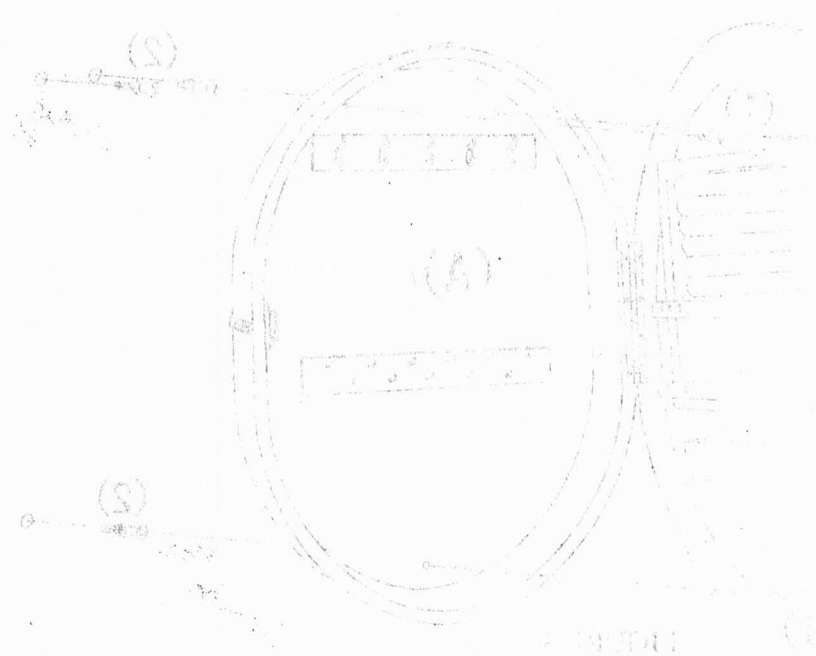

# ASSEMBLY INSTRUCTIONS

1. OPEN THE CARTON, CLEAN THE UNIT (A) WELL AND OPEN THE DOOR PANEL. CHECK IF ALL THE PARTS INSIDE ARE PRESENT. (AS SHOWN IN FIGURE 1).
2. SCREWING THE FASTENER ON THE DOOR TIGHTLY. (AS SHOWN IN FIGURE 2).
3. INSERT PLASTIC PLUG (2) INTO THE WALL FIRST; LOCKING UP THE UNIT (A) INTO THE WALL WITH SCREW NAIL (1); AND LAST CHECK IF THE UNIT (A) IS ATTACHED ON THE WALL FIRMLY. (AS SHOWN IN FIGURE 3).

